

Cocoon Wellness Pro System Set Up Instructions



COCOON
WELLNESS PRO™



Hyperthermic-Fitness System™




Wellness
USA Inc.


Cocoon Wellness Pro POD Set-up Instructions

Based on your personal choice or business method, select and follow the Cocoon set-up instructions below.

1. **T-Max Timer System Operation.** You may set up your Cocoon POD for use with an optional T-Max timer as follows.
 - A. Access the engineering screen (see appendix).
 - B. Press the SETTINGS box (shown below) to access the T-MAX function (also shown below).

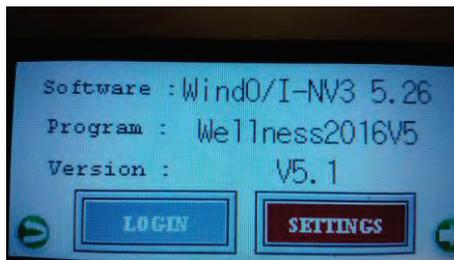


- C. Press the T-MAX box to select either T-MAX or NO T-MAX operation.
2. **Changing Cocoon Program Session Time(s).** The Cocoon program time(s) are pre-set at the factory to standard times (see chapter 5 of your Owner's Manual). You may change the program time settings as desired. Follow these instructions to change the standard time for each session.
 - A. Access the engineering screen (see appendix).
 - B. Press the SETTINGS key (shown below) to access the TIME DEFAULT SETTING (also shown below).

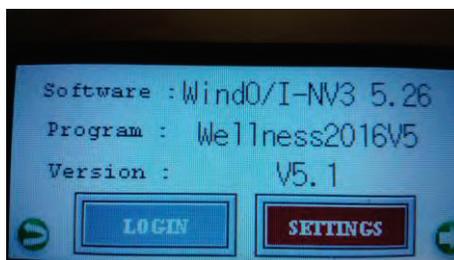

- C. Press the TIME DEFAULT SETTING key to access the TIME SETTING SCREEN (shown below).



- D. Press either the \wedge or \vee arrow key to select and change the time duration of the program sessions for the Cocoon POD. Changes may be made in five (5) minute increments from 15 to 60 minutes.
3. **Customized Cocoon Program Settings.** You can allow users to select their own custom settings for their Cocoon session (time, massage area, massage intensity, heat level, IR (on or off) and face fan intensity as follows.
- A. Access the engineering screen (see appendix).
- B. Press the SETTINGS key (shown below) to access the SCREEN DEFAULT SETTING (also shown below).

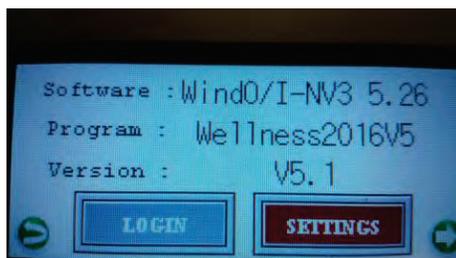

- C. Pressing the SCREEN V5-6AC key (shown below) allows you to select the CUSTOM program feature by selecting the screen shown below.



- D. The custom program mode allows you to change any of the setting shown below.






- E. When you are in the CUSTOM program mode, the available Cocoon programs will be displayed as shown below.



Appendix -- How to Access The Engineering Screen:

- A. Choose and enter any pre-set program. The program icon will appear in the middle of the screen. Press and hold the program icon symbol key (examples shown below) for ten (10) seconds. This will take you to the “LOG IN” screen (also shown below):

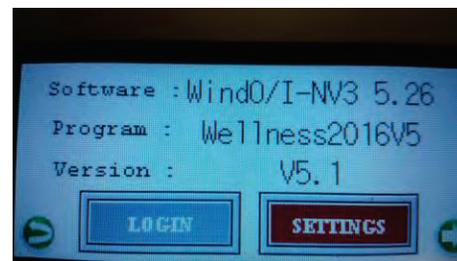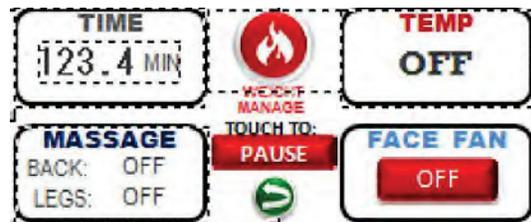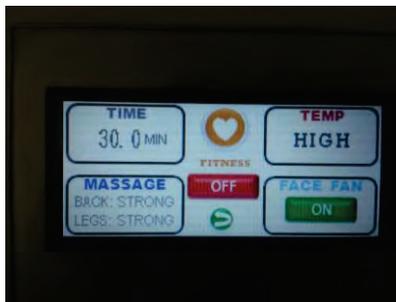

- B. Press the “LOG IN” key (shown above). This will bring you to the graphical keyboard (shown below).



- C. Use the arrows on the graphical keyboard (shown above) to toggle through and type in the passcode number 2792 (note: Select the numbers 2792 in sequence and hit “enter” each time you select a number; locate and select “OK” after you have entered the entire passcode number).
- D. Once the passcode 2792 has been properly entered, you will be taken to the SETTINGS screen. Press the “SETTINGS” key (shown below) to access the engineering screen options (also shown below). You may then proceed and make changes to your Cocoon programs software and operation parameters.

